



Connecting the feedback

VHF1400 - SIN / COS sensor

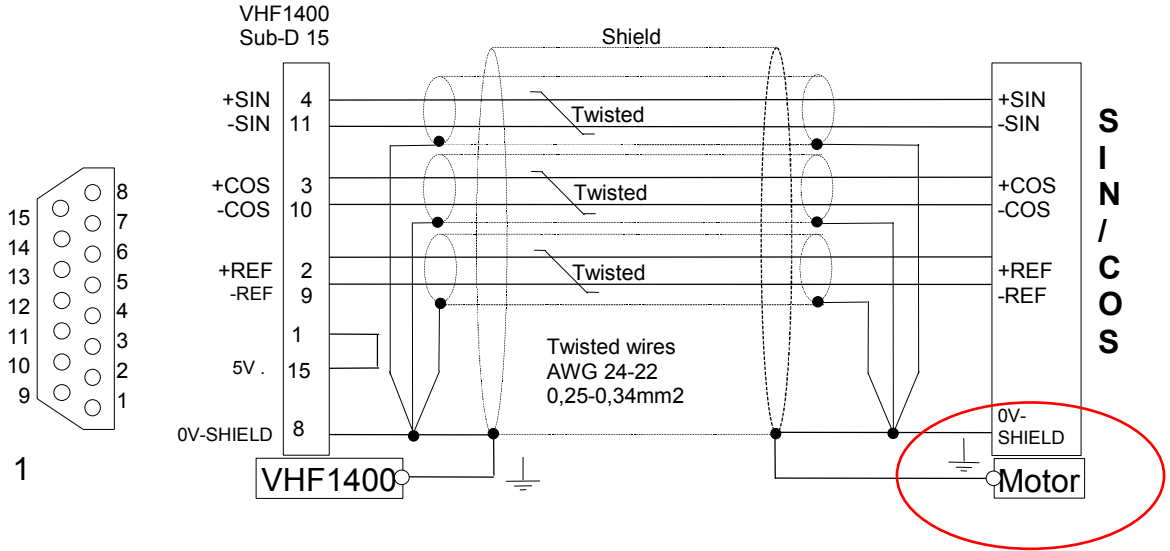

VHF1400 - ENCODER

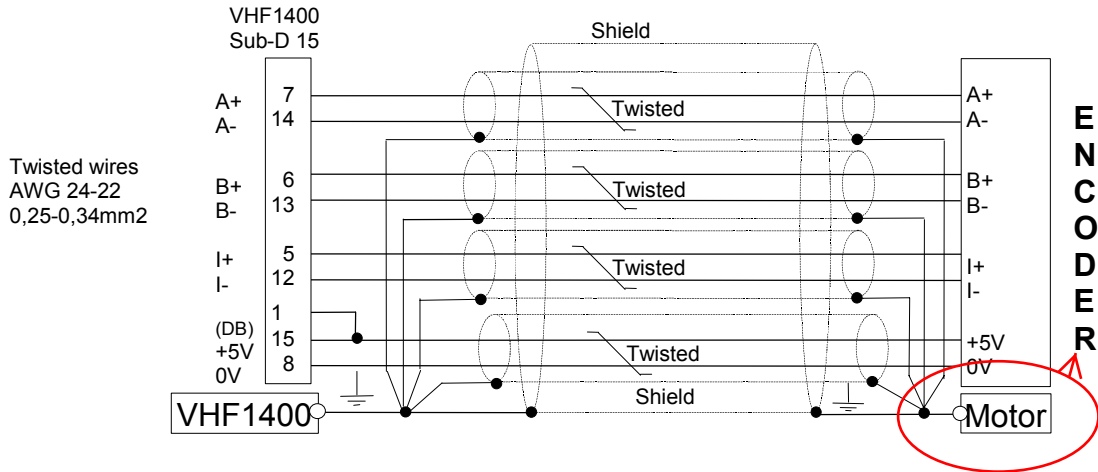

The shielding of the connection must start at the sensor have no interruption, and be grounded at both ends.